

User's Guide

TABLE OF CONTENTS



What's In The Box?1	I
Initial Setup 2	2
Modem Tcp/ip Settings for Hyosung 4	, t
Modem Configuration for Columbus Services Standar 15	5
Modem Configuration for Columbus Services Standar 3	5
Modem Configuration for Fis Metavante7	7
Modem Configuration for Switch Commerce	3
Modem Configuration for Elan 9)
Modem Tcp/ip Settings for Genmega	С
Modem Configuration for Columbus Services	1
Modem Configuration for Fis Metavante	3
Modem Configuration for Switch Commerce	5
Modem Configuration for Elan17	7

WHAT'S IN THE BOX?



1. Metroadvanta 4G Wireless Modem 2. Antenna





3. AC Adapter



INITIAL SETUP



- 1. Connect the antenna cables as shown in the figure.
- 2. Plug the modem to supplied AC Adapter.
- 3. The Power, CELL and SIGNAL lights will come on and flash solid after a few seconds.
- 4. When the lights are solid, connect the ethernet cable to the ATM.



Notes: If the lights are not solid and still blinking, please unplugged de AC adapter and wait until 3-7 min to plug it again. If the problem persist, call to our support center.









MODEM TCP / IP SETTINGS for





Nautilus Hyosung COLUMBUS TCP/IP SETTINGS MetroAdvanta max SYSTECH

*Customer Setup *Select Processor * Communication - TCP/IP Message Format - STANDARD 1 TCP/IP TYPE * TCP/IP - STANDARD SSL - ENABLE SSL VERSION -UP TO TLS V1.2 SSL CERT - DISABLE

Standard 1 Option terminal status – ENABLE reversal at host error - ENABLE reason for reversal - DISABLE

* System Setup Terminal IP P DHCP - Enable

* Host Setup

ROUTING ID CDHY

URL EN/DISABLE - ENABLE Host IP Address #1 and 2 (atm.columbusdata.net)

* Host Port #1 and #2 (6965)

* Terminal ID - example (P302066)







Nautilus Hyosung COLUMBUS TCP/IP SETTINGS MetroAdvanta max SYSTECH

*Customer Setup *Select Processor * Communication - TCP/IP * Message Format – STANDARD 3 *TCP/IP TYPE * TCP/IP - STANDARD * SSL – ENABLE * SSL VERSION - UP TO TLS V1.2 * SSL CERT – DISABLE *Standard 3 Option * Status Monitoring – ENABLE * Comm Header – ENABLE * Communication ID – (CDSAA0) * CRC EN/DISABLE – DISABLE * System Setup Terminal IP P DHCP - Enable * Host Setup *URL EN/DISABLE -- ENABLE *Host IP Address #1 and 2 (atm.columbusdata.net) * Host Port #1 and #2 (6965) * Terminal ID - example (P302066) BEFORE MASTER KEYS, CHANGE DENOMINATION. * Key Management *Enter master keys * Secure password – example #1 (111111) #2 (222222) * Key Mode * T-DES (3) *Edit Key

* Reboot Atm.

EMV ADA LIST FROM 13 TO 16 Disable





Nautilus Hyosung FIS/METAVANTE - PAI TCP/IP MetroAdvanta max

> *Customer Setup *Select Processor * Communication – TCP/IP

* Message Format – **STANDARD 1**

*TCP/IP TYPE

* TCP/IP – **STANDARD** * SSL – **ENABLE** * SSL VERSION –**UP TO TLS 1.2** * SSL CERT – **ENABLE**

*Standard 1 Option * Terminal Status – ENABLE *Reversal at host error– ENABLE *Reason for reversal– ENABLE * Host Setup

*URL EN/DISABLE – ENABLE *Host IP Address #1 & #2 (eftdebitatm.fnfis.com)

```
* Host Port #1 & #2 ( 443 )
```

* Routing ID: 000000 * Customer Setup Kernel version : V6.0 EMV – AID List - Disable #1, #12, #17 to 20 Fallback : Disable *System Setup * TERMINAL IP – DHCP -ENABLE

* Terminal ID – example (TX020066)
BEFORE MASTER KEYS, CHANGE DENOMINATION.
* Key Management
*Enter master keys
* Secure password – example #1 (111111) #2 (222222)
* Key Mode

* **T-DES(3)**

*Reboot Atm

Fis



Nautilus Hyosung SWITCH COMMERCE - TCP/IP

MetroAdvanta max

*Customer Setup *Select Processor * Communication - TCP/IP * Message Format – STANDARD 3 *****TCP/IP TYPE * TCP/IP – VISA FRAMED * SSL – ENABLE * SSL VERSION – UP TO TLS V1.2 * SSL CERT – **DISABLE** * EOT/ENO OPTION **Option – NO ENQ REQUIRED ENQ – NOT REQUIRED** EOT - REQUIRED * Standard 3 Option * Status Monitoring – ENABLE * Comm Header – ENABLE * Communication ID - 123SC101 * CRC EN/DISABLE – DISABLE * Host Setup *URL EN/DISABLE – ENABLE *Host IP Address #1 (atm1.switchcommerce.net) #2 (atm2.switchcommerce.net) * Host Port #1 (1440) #2 (1440) *System Setup * TERMINAL IP – DHCP -ENABLE *Customer Setup * OPTINONAL FUNCTION 1 EMV AID List - ENABLE ALL AIDs * Terminal ID – example (NH020066) **BEFORE MASTER KEYS, CHANGE DENOMINATION.** * Key Management *Enter master keys * Secure password – example #1 (111111) #2 (222222) * Key Mode * T-DES(3)

Reboot atm





Nautilus Hyosung

ELAN TCP/IP

*Customer Setup *Select Processor * Communication - TCP/IP * Message Format – STANDARD 3 ***TCP/IP TYPE** * TCP/IP – VISA FRAMED * SSL – ENABLE * SSL VERSION – UP TO TLS V1.2 * SSL CERT – ENABLE *Standard 3 Option * Status Monitoring - ENABLE * Comm Header – ENABLE * Communication ID – A01105 * CRC EN/DISABLE - DISABLE * EOT/ENQ OPTION **Option - NO ENQ REQUIRED** ENQ – NOT REQUIRED EOT – **REQUIRED** *System Setup **Terminal IP DHCP** - Enable * Host Setup *URL EN/DISABLE – ENABLE *Host IP Address #1 and #2 (POS.TNSI.COM) * Host Port #1 and #2 (5166) Older ports: 5362, 5262, 5162 are still enabled * Terminal ID – example (HY020066) **BEFORE MASTER KEYS, CHANGE DENOMINATION.** * Key Management *Enter master keys * Secure password – example #1 (111111) #2 (222222) * Key Mode

* **T-DES (3)** *Edit Key





MODEM TCP / IP SETTINGS for





COLUMBUS ONLY GENMEGA

1. System Setup * Serial number * Change serial number **Customer Setup** * Optional function * Change location name 2. Customer Setup * Change Processor * Communication – SSL Pass Through * Message Format – Standard 3 * SSL Data Format - 7 Bits Even Parity SSL Certification – **Disable** * Standard 3 Option * Comm Header – Enabled * Status Monitoring – Enabled * 12 Seq Number – Disabled * Use TCP/IP CRC – Disabled * SSL Version: TLS 1.2 System Setup (System Setup below should already be configured. If so, please leave it as is)

3. Host Setup * Host IP Address # 1 and 2 (atm.columbusdata.net)

* Host Port # 1 AND 2 - (6965)

* Configuration – Schedule

* Routing ID * Change Routing # -Standard 3 (CDSAA0) Standard 1 (CDHY)

(continue...)





COLUMBUS ONLY GENMEGA

* Terminal Number * Change Terminal # - Example (**P311490**) **BEFORE MASTER KEY YOU SHOULD CHANGE DENOMINATION.** * Key Management * Enter Secure Password - #1 (111111) # 2 (222222) * Key Mode * T-DES * Edit Master Key * Key Part A * Key Index - (00) OR (01) * Key Entry – A- B * Key Part B * Key Index - (00) OR (01) * Key Entry – A- B 4. System Setup * Device Setup * ATM TCP/IP Setup * TCP/IP Mode - DHCP PING TO G/W * IP Address * Example - (192.168.1.139) * Subnet Mask * Example – (255.255.255.)





FIS/METAVANTE - PAI

GENMEGA G2500

1. System Setup

* Serial number

* Change serial number

2. Customer Setup

* Change Processor

- * Communication SSL Length Prefix with ETX
- * Message Format Standard 3
- * SSL Data Format 8 Bits for MetroAdvanta and Regular Router

* Standard 3 Option

- * Comm Header Disable
- * Status Monitoring Enabled
- * 12 Seq Number Disabled
- * Use TCP/IP CRC Disable

*SSL Version: TLS 1.2

System Setup (System Setup below should already be configured. If so, please leave it as is)

3. Host Setup

- * Host IP Address #1 & #2 (eftdebitatm.fnfis.com)
- * Host Port #1 & #2 (443)
- * Configuration Schedule
- * Routing ID
 - * Change Routing # (000000)
- * Terminal Number

```
* Change Terminal # - Example (TX92300)
```

* Key Management

* Enter Secure Password - # 1 (111111) # 2 (222222)

(continue...)

Fis

METROADVANTA



FIS/METAVANTE PAI GENMEGA G2500

* Key Mode * T-DES * Edit Master Key * Key Part A * Key Index - (00) OR (01) * Key Entry – A- B * Key Part B * Key Index - (00) OR (01) * Key Entry – A- B 4. System Setup * Device Setup * ATM TCP/IP Setup * TCP/IP Mode - DHCP * IP Address * Example - (192.168.1.100) * Subnet Mask * Example – (255.255.255.0) * Default Gateway * Example – (192.168.1.1)

Push APPLY to save changes. REBOOT ATM

FIS

SWITCH COMMERCE - internet GENMEGA G2500

1. System Setup * Serial number * Change serial number **Customer Setup** * Optional function * Change location name 2. Customer Setup * Change Processor * Communication - SSL Pass Through * Message Format – Standard 3 * SSL Data Format -- 7 Bits Even Parity for Regular Router and Metro Advanta. SSL Certification – **Disable** * SSL – TLS 1.2 *Customer setup Optional function - EMV - Enable All AID * Standard 3 Option * Comm Header – Enabled * Status Monitoring - Enabled * 12 Seq Number – Disabled * Use TCP/IP CRC – Enable 3. Host Setup * Host IP Address #1 (atm1.switchcommerce.net) Host IP Address # 2 (atm2.switchcommerce.net) * Host Port # 1 AND 2 - (1440) * Configuration – Schedule * Routing ID * Change Routing # - (123SC101)

(continue...)





15

SWITCH COMMERCE - internet GENMEGA G2500

* Terminal Number * Change Terminal # - Example (TX032408) **BEFORE MASTER KEYS, CHANGE DENOMINATION.** * Key Management * Enter Secure Password - example #1(000000) **#2(000000)** * Key Mode * T-DES * Edit Master Key * Key Part A * Key Index - (00) OR (01) * Key Entry – A- B * Key Part B * Key Index - (00) OR (01) * Key Entry – A- B 4. System Setup * Device Setup * ATM TCP/IP Setup * TCP/IP Mode – DHCP *Press -- APPLY PING TO G/W

***REBOOT ATM**





ELAN - internet GENMEGA G2500

1. System Setup

* Serial number

* Change serial number

Customer Setup

* Optional function

* Change location name

2. Customer Setup

* Change Processor

* Communication - SSL Pass Through

* Message Format – Standard 3

SSL Certification - Disable

* Standard 3 Option

* Comm Header – Enabled

* Status Monitoring - Enabled

* 12 Seq Number – Disabled

* Use TCP/IP CRC – Disabled

3. SSL Version: TLS 1.2 _

System Setup (System Setup below should already be configured. If so, please leave it as is)

SSL Verify Certificate: Enabled

Host Setup

Change Host IP address 1 and 2: **pos.tnsi.com** Change Host Port 1 and 2: **5166** Older ports 5362, 5262, 5162 are still enabled

* Configuration – Schedule

* Routing ID

* Change Routing # - (A01105)

* Terminal Number

* Change Terminal # - Example (CI032408)

GENMEGA

continue...





ELAN - internet GENMEGA G2500

BEFORE MASTER KEYS, CHANGE DENOMINATION.

* Key Management * Enter Secure Password - example #1(000000) # 2(000000) * Key Mode * T-DES * Edit Master Key * Key Part A

* Key Index - (**00**) OR (**01**) * Key Entry – **A- B** * Key Part B * Key Index - (**00**) OR (**01**)

* Key Entry – A- B

4. System Setup * Device Setup * ATM TCP/IP Setup * TCP/IP Mode – DHCP * Press -- APPLY PING TO G/W

***REBOOT ATM**









